

Wall Fixed

Cadenza Page 1 of 2



Instrument Components:

M8 Nyloc Nut



M6x20 Security Screw



2 Part Cover

M6 Saddle Strap

Metric Conversion: 250mm/10" 300mm/12" 450mm/18"

700mm/28" 850mm/33" 1.5m/59"

> BRITAIN BS EN 1176


Installation Instructions









Weight of heaviest part 7kg (Cadenza)




2. Attach Wall Fixing posts to legs(1.2) (See Ground Fix Post Installation Sheet)




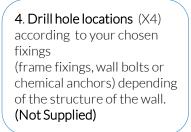



to the saddle strap on the leg. (1.3)

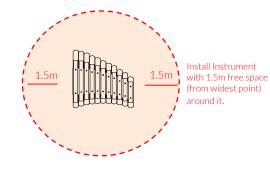

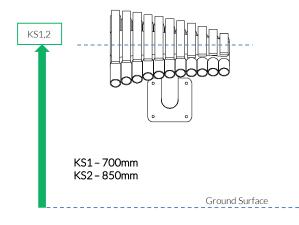

6. Attach the 1 pair of beater



Wall Fix Pair Small Red Beaters X1 Components:







Wall Fixed

Cadenza Page 2 of 2



Instrument Components:

M8 Nyloc Nut



M6x20 Security Screw




2 Part Cover


M6 Saddle Strap

Thread Lock Solution Required (Not Supplied)



Assembly Guide PPCADE



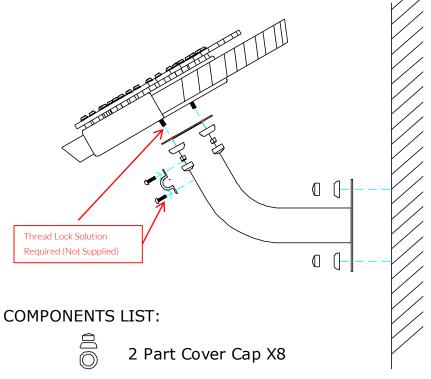

M8 Nyloc nut X4



Saddle Strap X1

M6x20 Pin torx X2

